

CoroCAM[®] Accessories & Spares

VIRCO

Brochure version 2021/1 Some of these accessories are included in your CoroCAM purchase, please see as indicated. Specifications subject to change without notice. info@uvirco.com www.uvirco.com



CoroCAM® Accessories





NP-F770 Battery

A rechargeable Li-ion battery pack delivering 7.4V - 4400mAh which provides enough energy to power a camera for up to 3.5Hrs.

Two batteries included with the purchase of a CoroCAM 6HD or CoroCAM 7 and one battery included with the CoroCAM 8UAV.



NP-F970 Battery

A rechargeable Li-ion battery pack delivering 7.4V - 8800mAh which provides enough energy to power a camera for up to 4Hrs.

Two batteries included with the purchase of a CoroCAM 8. One battery included with the purchase of a or CoroCAM 8UAV (A NP-F770 and battery spacer are also supplied).



Battery Spacer

The battery spacer is used with a NP-F770 battery in a CoroCAM 8 series camera instead of a NP-F970 battery to save weight.

Included with a CoroCAM 8UAV purchase.



Battery Charger

A dual charger which can charge batteries in parallel and can show battery status even when not plugged in. A car charger cable is included. Also has a USB port.

One battery charger included with the purchase of all Handheld & UAV Cameras.



Harness

A harness for comfort during longer inspections, featuring quick release buckles with high strength attachment loops for CoroCAM 6HD. Also has mounting points for DSLR camera or binoculars. Alternate attachments for other CoroCAM products.



Neckstrap

A basic Neckstrap with quick-release buckles and high strength attachment loops for the CoroCAM 6HD. Alternate attachments for other CoroCAM products.

CoroCAM[®] Accessories



SD Card

The SD Card size depends on what is available at the time of issue. Micro-SD card adaptor included.

One SD card is included with all camera models.



HDMI Cable

The HDMI cable is used to connect the CoroCAM 6HD, CoroCAM 8 or CoroCAM 8 UAV to HDMI displays or transmitters.

Included with the CoroCAM 6HD, CoroCAM 8 and CoroCAM 8UAV cameras.



Mains Power Supply

12V DC Power supply with US or EU plug.

Included with all CoroCAM cameras.



CoroCAM Inspection Guide

CoroCAM Inspection Guide, including the EPRI Field Guide

The CoroCAM Inspection guide contains camera and operational information which will help the operator use the system effectively.

The EPRI guide contains an image library of a variety of components with examples of what discharges on these components look like, a description of the activity which would result in a discharge detected on the hardware location, what will happen if no action is taken, the time frame until failure and what action should be taken to correct the fault. Fully licensed from US EPRI.



USB with Manual

The USB stick contains the latest versions of the product manual and CoroBASE software.

Included with all CoroCAM cameras.

CoroCAM® Spares

INPROTEC IRT

For the CoroCAM 6HD:



Sunshield

The sunshield attaches to the LCD display. It can be adjusted to cast shadow over the screen.



Lens cap

The lens cap provides protection from scratches and minor collisions.



Hand pad and strap

The hand pad and strap can be adjusted to secure the camera to your hand, it also provides a comfortable fit.

For the CoroCAM 7:



Lens cap

The lens cap provides protection from scratches and minor collisions.



Hand strap

The hand strap for the CoroCAM 7 secures the camera to your hand.



CoroCAM® Spares

For the CoroCAM 8:



Lens caps

The lens caps provides protection from scratches and minor collisions.



Hand strap

The hand strap for the CoroCAM 8 can be adjusted for a comfortable fit.

Per maggiori informazioni contattare:



Via Bizet, 44 20092 Cinisello Balsamo (MI) Tel. 02 - 66.59.59.77 e-mail: infrared@inprotec-irt.it Web: <u>www.inprotec-irt.it</u>

